

Torque Specs

Contents

TORQ-2	1.1 Helmet Torque Tables	TORQ-19	1.4 Side Block Torque Tables
TORQ-2	1.1.1 SL 17B Torque Table	TORQ-19	1.4.1 Side Block Torque Table (Stainless Steel)
TORQ-2	1.1.2 SL 17C Torque Table	TORQ-20	1.4.2 Brass Side Block Torque Table
TORQ-4	1.1.3 SL 27 Torque Tables	TORQ-20	1.5 Regulator Torque Tables
TORQ-5	1.1.4 KM 37 Torque Table	TORQ-20	1.5.1 SuperFlow® Torque Table
TORQ-6	1.1.5 KM 37SS Torque Table	TORQ-20	1.5.2 SuperFlow® 350 Torque Table
TORQ-8	1.1.6 KM 47 Torque Table	TORQ-21	1.5.3 SuperFlow® 450 Torque Table
TORQ-9	1.1.7 KM 57 Torque Table	TORQ-21	1.5.4 REX® Regulator Torque Table
TORQ-11	1.1.8 KM 77 Torque Table	TORQ-21	1.5.5 455 Balanced Regulator Torque Table
TORQ-12	1.1.9 KM 97 Torque Table	TORQ-22	1.6 Communications Torque Table
TORQ-14	1.1.10 KM Diamond Torque Tables	TORQ-22	1.7 Neck Ring Torque Tables
TORQ-14	1.1.10.1 500-710/500-711 KM Diamond	TORQ-22	1.7.1 Neoprene Neck Ring Assembly Torque Table
TORQ-16	1.1.10.2 505-373 Regulator Cover Assembly	TORQ-22	1.7.2 Latex Neck Ring Assembly Torque Table
TORQ-16	1.1.10.3 505-375 Surface Bypass Valve Assembly	TORQ-23	1.7.3 SL 17B Neck Clamp Yoke Assembly
TORQ-16	1.1.10.4 505-400 Diamond Exhaust Assembly	TORQ-23	1.8 Locking Collar Torque Table
TORQ-16	1.1.10.5 505-752 Diamond Main Tube	TORQ-23	1.8.1 Locking Collar Torque Table (Stainless Steel)
TORQ-17	1.2 BandMask® Torque Tables	TORQ-23	1.9 Manifold Block Torque Table
TORQ-17	1.2.1 KMB 18 Torque Table	TORQ-24	1.10 Miscellaneous Torque Specifications
TORQ-17	1.2.2 KMB 28 Torque Table	TORQ-24	1.11 Notes on Torque Specifications
TORQ-18	1.3 Surface Supplied MOD-1 Torque Tables	TORQ-24	1.12 Checklist, Maintenance, and Pre-Dive Inspections
TORQ-18	1.3.1 Surface Supplied MOD-1		
TORQ-18	1.3.2 Surface Supplied Pod		
TORQ-18	1.3.3 Regulator Pod Sub- Assembly		
TORQ-19	1.3.4 Side Block Sub-Assembly w/Emergency Valve		
TORQ-19	1.3.5 Main Tube Assembly/Surf- Sup		

1.1 Helmet Torque Tables

1.1.1 SL 17B Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
4	530-090	Screw, Alignment	40 Medium Strength Thread Locker	4.5 Medium Strength Thread Locker
8	555-154	Bent Tube Assembly, Side Block End	75	8.5
12	530-032	Screw, Main Exhaust Body	6 RTV Sealant	0.7 RTV Sealant
15	530-070	Screw, Handle	15 RTV Sealant	1.7 RTV Sealant
18	530-040	Screw, Handle	12	1.3
20	530-050	Screw, Side Block	20	2.3
23	530-317	Nut, Air Train (Inner)	35	4
26	530-317	Nut, Air Train (Outer)	15	1.7
27	530-052	Screw, Port Retainer Plug	20	2.3
28	530-035	Screw, Port Retainer	12	1.3
29	550-062	Knob, Nose Block	<i>Tighten to bottom out</i>	
32	550-116	Nose Block Guide	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
43	530-019	Screw, Quad Exhaust	12	1.3
56	530-045	Screw, Whisker Kidney Plate	12	1.3
62	530-070	Screw, For Mounting Weights And Chin Strap	35 RTV Sealant	4 RTV Sealant
64	530-078	Screw, For Mounting Weights	20 RTV Sealant	2.3 RTV Sealant
67	530-308	Nut, Communications Posts	<i>Snug—DO NOT overtighten RTV Sealant</i>	
84	550-038	Regulator Mount Nut	75 Molykote® 111 Lubricate or Equivalent	8.5 Molykote® 111 Lubricate or Equivalent

1.1.2 SL 17C Torque Table

Loc. #	Part #	Description	Torque in inch pounds	Torque in Newton Meters
7	555-154	Bent Tube Assembly, Side Block End	75	8.5
11	530-070	Screw, Top Weight	20	2.3
12	530-035	Screw, Water Dump Body	6 RTV Sealant	0.7 RTV Sealant
13	530-070	Screw, Port Weight	20	2.3

1.1.2 SL 17C Torque Table

Loc. #	Part #	Description	Torque in inch pounds	Torque in Newton Meters
16	530-078	Screw, Top Weight	20	2.3
17	530-040	Screw, Bracket	12	1.3
20	530-062	Screw, Rear Handle And Bracket	35	4
24	530-045	Screw, Handle	12	1.3
26	530-050	Screw, Side Block	20	2.3
29	530-317	Nut, Air Train (Inner)	35	4
32	530-317	Nut, Air Train (Outer)	15	1.7
33	530-052	Screw, Port Retainer Plug	20	2.3
34	530-035	Screw, Port Retainer	12	1.3
35	550-062	Knob, Nose Block	<i>Tighten to bottom out</i>	
38	550-116	Nose Block Guide	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
44	530-015	Screw, Sealed Pull Pin Assembly	<i>Medium-strength thread locker for pre-2026 bottom rings ONLY. NOT to be used on current stainless steel bottom rings.</i>	
46	530-032	Screw, Swing Catch Spring	12 Medium Strength Thread Locker	1.3 Medium Strength Thread Locker
47	530-059	Screw, Front Standoff	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
53	530-019	Screw, Water Dump Cover (Exhaust)	12	1.3
67	530-045	Screw, Kidney Plate	12	1.3
72	530-035	Screw, Swing Catch	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
77	530-045	Screw, Spring Spacer	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
81	530-018	Screw	24 Medium Strength Thread Locker	2.7 Medium Strength Thread Locker
87	530-064	Screw, Neck Pad	<i>Snug—to no movement of pad</i>	

1.1.2 SL 17C Torque Table

Loc. #	Part #	Description	Torque in inch pounds	Torque in Newton Meters
111	550-081	Nut Regulator Mount	75 Molykote® 111 Lubricate or Equivalent	8.5 Molykote® 111 Lubricate or Equivalent
115	530-018	Screw, Earphone Retainer & Snaps	12 RTV Sealant	1.3 RTV Sealant
118	530-031	Screw, Chin Strap	12 RTV Sealant	1.3 RTV Sealant

1.1.3 SL 27 Torque Tables

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
6	555-154	Bent Tube Assembly, Side Block End	75	8.5
9	530-070	Screw, Port Weight	20	2.3
12	530-078	Screw, Rear Weight, SL 27	20 RTV Sealant	2.3 RTV Sealant
15	530-070	Screw, Handle	15 RTV Sealant	1.7 RTV Sealant
19	530-045	Screw, Handle	12	1.3
21	530-050	Screw, Side Block	20	2.3
24	530-317	Nut, Air Train (Inner)	35	4
27	530-317	Nut, Air Train (Outer)	15	1.7
29	530-062	Screw, Port Weight	15	1.7
30	530-052	Screw, Port Retainer Plug	20	2.3
31	530-035	Screw, Port Retainer	12	1.3
32	550-062	Knob, Nose Block	<i>Tighten to bottom out</i>	
35	550-116	Nose Block Guide	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
40	530-015	Screw, Sealed Pull Pin Assembly	<i>Medium-strength thread locker for pre-2026 bottom rings ONLY. NOT to be used on current stainless steel bottom rings.</i>	
43	530-059	Screw, Front Standoff	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
45	530-032	Screw, Water Dump Body	6 RTV Sealant	0.7 RTV Sealant
64	530-045	Screw, Whisker Kidney Plate	12	1.3
69	530-032	Screw, Swing Catch Spring	12 Medium Strength Thread Locker	1.3 Medium Strength Thread Locker

1.1.3 SL 27 Torque Tables

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
70	530-035	Screw, Tongue Catch Mount	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
72	530-035	Screw, Swing Catch	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
77	530-045	Screw, Spring Spacer	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
84	530-064	Screw, Neck Pad	<i>Snug—to no movement of pad</i>	
101	550-081	Regulator Mount Nut	75 Molykote® 111 Lubricate or Equivalent	8.5 Molykote® 111 Lubricate or Equivalent
105	530-018	Screw, Earphone Retainer & Snaps	12 RTV Sealant	1.3 RTV Sealant
108	530-031	Screw, Chin Strap	12 RTV Sealant	1.3 RTV Sealant

1.1.4 KM 37 Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque Newton Meters
7	555-154	Bent Tube Assembly, Side Block End	75	8.5
11	530-070	Screw, Top Weight	20 RTV Sealant	2.3 RTV Sealant
12	530-032	Screw, Water Dump Body	6 RTV Sealant	0.7 RTV Sealant
13	530-070	Screw, Top Weight (Handle)	20	2.3
13	530-070	Screw, Port Weight	20 RTV Sealant	2.3 RTV Sealant
16	530-078	Screw, Top Weight	20 RTV Sealant	2.3 RTV Sealant
19	530-078	Screw, Top Weight (Outer)	20 RTV Sealant	2.3 RTV Sealant
23	530-045	Screw, Handle	12	1.3
25	530-050	Screw, Side Block	20	2.3
28	530-317	Nut, Air Train (Inner)	35	4
31	530-317	Nut, Air Train (Outer)	15	1.7
33	530-062	Screw, Port Weight	15	1.7
34	530-052	Screw, Port Retainer Plug	20	2.3

1.1.4 KM 37 Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque Newton Meters
35	530-035	Screw, Port Retainer	12	1.3
36	550-062	Knob, Nose Block	<i>Tighten to bottom out</i>	
39	550-116	Nose Block Guide	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
44	530-015	Screw, Sealed Pull Pin Assembly	<i>Medium-strength thread locker for pre-2026 bottom rings ONLY. NOT to be used on current stainless steel bottom rings.</i>	
47	530-059	Screw, Front Standoff	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
53	530-019	Screw, Quad Exhaust Cover	12	1.3
67	530-045	Screw, Whisker Kidney Plate	12	1.3
72	530-032	Screw, Swing Catch Spring	12 Medium Strength Thread Locker	1.3 Medium Strength Thread Locker
73	530-035	Screw, Tongue Catch Mount	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
75	530-035	Screw, Swing Catch	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
80	530-045	Screw, Spring Spacer	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
87	530-064	Screw, Neck Pad	<i>Snug—to no movement of pad</i>	
104	550-081	Regulator Mount Nut	75 Molykote® 111 Lubricate or Equivalent	8.5 Molykote® 111 Lubricate or Equivalent
108	530-018	Screw, Earphone Retainer & Snaps	12 RTV Sealant	1.3 RTV Sealant
111	530-031	Screw, Chin Strap	12 RTV Sealant	1.3 RTV Sealant

1.1.5 KM 37SS Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
6	530-058	Screw, Handle Rear	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker

1.1.5 KM 37SS Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
8	530-078	Screw, Handle Grip	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
15	530-059	Screw, Handle Front	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
19	530-083	Screw, Side Block	20	2.3
23	530-317	Nut, Air Train Assembly	35	4
25	530-059	Screw, Port Retainer	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
26	550-566	Adaptor, Port Retainer Plug	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
27	530-052	Screw, Port Retainer Plug	15	1.7
28	550-062	Knob, Nose Block	<i>Tighten to bottom out</i>	
31	550-577	Nose Block Guide	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
36	550-081	Regulator Mount Nut	75 Molykote® 111 Lubricate or Equivalent	8.5 Molykote® 111 Lubricate or Equivalent
64	530-070	Screw, Whisker Kidney Plate/Anode	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
74	530-032	Screw, Swing Catch Spring	12 Medium Strength Thread Locker	1.3 Medium Strength Thread Locker
75	530-035	Screw, Swing Catch	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
82	530-045	Screw, Spring Spacer	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker

1.1.5 KM 37SS Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
90	530-037	Screw, Earphone Retainer	10 Medium Strength Thread Locker	1.1 Medium Strength Thread Locker
90	530-037	Screw, Snap Tab	10 Medium Strength Thread Locker	1.1 Medium Strength Thread Locker
94	530-059	Screw, Front Standoff	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
97	530-015	Screw, Sealed Pull Pin Assembly	<i>Apply Medium Strength Thread Locker to the threads and install the screw until the head is bottomed out, just snug.</i>	
106	555-154	Bent Tube, Side Block End	75	8.5
not numbered	530-037	Screw, Chin Strap Assembly	6 Medium Strength Thread Locker	0.7 Medium Strength Thread Locker

1.1.6 KM 47 Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
9	550-372	Regulator Mount Nut	75 Molykote® 111 Lubricate or Equivalent	8.5 Molykote® 111 Lubricate or Equivalent
14	555-167	Bent Tube Assembly, Side Block End	75	8.5
14	555-167	Bent Tube, Regulator End	40	4.5
18	530-070	Screw, Top Weight	20 RTV Sealant	2.3 RTV Sealant
20	530-070	Screw, Handle	35	4
20	530-070	Screw, Port Weight	20 RTV Sealant	2.3 RTV Sealant
23	530-078	Screw, Top Weight	20 RTV Sealant	2.3 RTV Sealant
26	530-078	Screw, Top Weight (Outer)	20 RTV Sealant	2.3 RTV Sealant
30	530-045	Screw, Handle	12	1.3
32	530-050	Screw, Side Block	20	2.3

1.1.6 KM 47 Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
35	530-317	Nut, Air Train (Inner)	35	4
38	530-317	Nut, Air Train (Outer)	15	1.7
40	530-062	Screw, Port Weight	15	1.7
41	530-052	Screw, Port Retainer Plug	20	2.3
42	530-035	Screw, Port Retainer	12	1.3
43	550-062	Knob, Nose Block	<i>Tighten to bottom out</i>	
46	550-116	Nose Block Guide	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
51	530-015	Screw, Sealed Pull Pin Assembly	<i>Medium-strength thread locker for pre-2026 bottom rings ONLY. NOT to be used on current stainless steel bottom rings.</i>	
55	530-045	Screw, Whisker, Kidney Plate	12	1.3
57	530-032	Screw, Swing Catch Spring	12 Medium Strength Thread Locker	1.3 Medium Strength Thread Locker
58	530-059	Screw, Swing Standoff	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
63	530-035	Screw, Swing Catch	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
68	530-045	Screw, Spring Spacer	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
76	550-113	Screw, Neck Pad	<i>Snug—to no movement of pad</i>	
88	530-018	Screw, Earphone Retainer & Snaps	12 RTV Sealant	1.3 RTV Sealant
91	530-031	Screw, Chin Strap	12 RTV Sealant	1.3 RTV Sealant

1.1.7 KM 57 Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque Newton Meters
7	555-154	Bent Tube Assembly, Side Block End	75	8.5
11	530-070	Screw, Top Weight	20 RTV Sealant	2.3 RTV Sealant
12	530-032	Screw, Water Dump Body	6 RTV Sealant	0.7 RTV Sealant
13	530-070	Screw, Top Weight (Handle)	20	2.3

1.1.7 KM 57 Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque Newton Meters
13	530-070	Screw, Port Weight	20 RTV Sealant	2.3 RTV Sealant
16	530-078	Screw, Top Weight	20 RTV Sealant	2.3 RTV Sealant
19	530-078	Screw, Top Weight (Outer)	20 RTV Sealant	2.3 RTV Sealant
23	530-045	Screw, Handle	12	1.3
25	530-050	Screw, Side Block	20	2.3
28	530-317	Nut, Air Train (Inner)	35	4
31	530-317	Nut, Air Train (Outer)	15	1.7
33	530-062	Screw, Port Weight	15	1.7
34	530-052	Screw, Port Retainer Plug	20	2.3
35	530-035	Screw, Port Retainer	12	1.3
36	550-062	Knob, Nose Block	<i>Tighten to bottom out</i>	
39	550-116	Nose Block Guide	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
44	530-015	Screw, Sealed Pull Pin Assembly	<i>Medium-strength thread locker for pre-2026 bottom rings ONLY. NOT to be used on current stainless steel bottom rings.</i>	
45	530-032	Screw, Swing Catch Spring	12 Medium Strength Thread Locker	1.3 Medium Strength Thread Locker
51	530-019	Screw, Quad Exhaust Cover	12	1.3
66	530-045	Screw, Whisker Kidney Plate	12	1.3
71	530-035	Screw, Swing Catch	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
76	530-045	Screw, Spring Spacer	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
84	530-064	Screw, Neck Pad	<i>Snug—to no movement of pad</i>	
99	550-081	Regulator Mount Nut	75 Molykote® 111 Lubricate or Equivalent	8.5 Molykote® 111 Lubricate or Equivalent
103	530-018	Screw, Earphone Retainer & Snaps	12 RTV Sealant	1.3 RTV Sealant
106	530-031	Screw, Chin Strap	12 RTV Sealant	1.3 RTV Sealant

1.1.8 KM 77 Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
6	530-058	Screw, Handle Rear	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
8	530-078	Screw, Handle Grip	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
15	530-059	Screw, Handle Front	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
19	530-083	Screw, Side Block	20	2.3
23	530-317	Nut, Air Train Assembly	35	4
25	530-059	Screw, Port Retainer	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
26	550-566	Adapter, Port Retainer Plug	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
27	530-052	Screw, Port Retainer Plug	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
28	550-062	Knob, Nose Block	<i>Tighten to bottom out</i>	
31	550-577	Nose Block Guide	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
42	550-372	Regulator Mount Nut	80 Molykote® 111 Lubricate or Equivalent	9 Molykote® 111 Lubricate or Equivalent
57	530-070	Screw, Whisker Kidney Plate/ Anode	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
60	530-032	Screw, Swing Catch Spring	12 Medium Strength Thread Locker	1.3 Medium Strength Thread Locker
61	530-035	Screw, Swing Spacer	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker

68	530-045	Screw, Spring Spacer	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
76	530-037	Screw, Earphone Retainer	10 Medium Strength Thread Locker	1.1 Medium Strength Thread Locker
76	530-037	Screw, Snap Tab	10 Medium Strength Thread Locker	1.1 Medium Strength Thread Locker
80	530-059	Screw, Front Standoff	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
83	530-015	Screw, Sealed Pull Pin Assembly	<i>Apply Medium Strength Thread Locker to the threads and install the screw until the head is bottomed out, just snug.</i>	
92	555-167	Bent Tube, Side Block End	75	8.5
not numbered	530-037	Screw, Chin Strap Assembly	6 Medium Strength Thread Locker	0.7 Medium Strength Thread Locker

1.1.9 KM 97 Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
6	530-058	Screw, Handle Rear	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
8	530-078	Screw, Handle Grip	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
15	530-059	Screw, Handle Front	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
19	530-083	Screw, Side Block	20	2.3
23	530-317	Nut, Air Train Assembly	35	4
25	530-059	Screw, Port Retainer	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker

1.1.9 KM 97 Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
26	550-566	Adapter, Port Retainer Plug	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
27	530-052	Screw, Port Retainer Plug	15	1.7
28	550-062	Knob, Nose Block	<i>Tighten to bottom out</i>	
31	550-577	Nose Block Guide	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
42	550-081	Regulator Mount Nut	75 Molykote® 111 Lubricate or Equivalent	8.5 Molykote® 111 Lubricate or Equivalent
63	530-070	Screw, Anode	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
73	530-032	Screw, Swing Catch Spring	12 Medium Strength Thread Locker	1.3 Medium Strength Thread Locker
74	530-035	Screw, Swing Catch	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
81	530-045	Screw, Spring Spacer	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
93	530-059	Screw, Front Standoff	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
89	530-037	Screw, Earphone Retainer	10 Medium Strength Thread Locker	1.1 Medium Strength Thread Locker
89	530-037	Screw, Snap Tab	10 Medium Strength Thread Locker	1.1 Medium Strength Thread Locker
96	530-015	Screw, Sealed Pull Pin Assembly	<i>Apply Medium Strength Thread Locker to the threads and install the screw until the head is bottomed out, just snug.</i>	
105	555-154	Bent Tube, Side Block End	75	8.5

1.1.9 KM 97 Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
not numbered	530-037	Screw, Chin Strap Assembly	6 Medium Strength Thread Locker	0.7 Medium Strength Thread Locker

1.1.10 KM Diamond Torque Tables

1.1.10.1 500-710/500-711 KM Diamond

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
9	530-058	Screw, Handle Rear	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
11	530-078	Screw, Handle Grip	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
18	530-059	Screw, Handle Front	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
23	530-059	Screw, Port Retainer	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
24	550-566	Adapter, Port Retainer Plug	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
25	530-052	Screw, Port Retainer Plug	15	1.7
29	550-062	Knob, Nose Block	<i>Tighten to bottom out</i>	
32	550-577	Nose Block Guide	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
35	530-074	Screw, SBV	30 Medium Strength Thread Locker	3.4 Medium Strength Thread Locker
38	530-059	Screw, SBV Bracket	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker

1.1.10 KM Diamond Torque Tables

1.1.10.1 500-710/500-711 KM Diamond

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
41	530-076	Screw, SBV Bracket	30 Medium Strength Thread Locker	3.4 Medium Strength Thread Locker
45	530-317	Nut, Air Train Assembly	35	4
46	530-083	Screw, Side Block	20	2.3
50	530-032	Screw, Swing Catch Spring	12 Medium Strength Thread Locker	1.3 Medium Strength Thread Locker
52	530-059	Screw, Front Standoff	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
58	830-015	Screw, Oral Nasal Mount	10 RTV Sealant	1.1 RTV Sealant
89	550-050	Jam Nut	40	4.5
92	530-059	Screw, Pod Mounting (Inside)	30	3.4
94	530-035	Screw, Swing Catch	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
99	530-045	Screw, Spring Spacer	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
102	530-037	Screw, Earphone Retainer	10 Medium Strength Thread Locker	1.1 Medium Strength Thread Locker
102	530-037	Screw, Snap Tab	10 Medium Strength Thread Locker	1.1 Medium Strength Thread Locker
123	530-015	Screw, Sealed Pull Pin Assembly	<i>Apply Medium Strength Thread Locker to the threads and install the screw until the head is bottomed out, just snug.</i>	
137	555-074	Bent Tube, Side Block End	75	8.5
not numbered	530-037	Screw, Chin Strap Assembly	6 Medium Strength Thread Locker	0.7 Medium Strength Thread Locker

1.1.10.2 505-373 Regulator Cover Assembly

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
27	530-099	Cover Retainer Screw	18	2
28	550-074	Bishop Pin	20	2.3

1.1.10.3 505-375 Surface Bypass Valve Assembly

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
1	550-616	Hose Fitting Adapter ½" NPT	80	9
24	550-617	Adapter Nipple	60	6.8

1.1.10.4 505-400 Diamond Exhaust Assembly

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
2	830-015	Screw, Split Retainer	<i>Tighten the hex screws until the top of each screw is just barely below the outer surface of the knob.</i>	
22	530-309	Cap Screw	20	2.3
23	550-618	Adapter Outlet	60	6.8

1.1.10.5 505-752 Diamond Main Tube

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
14	550-567	Adjustment packing Nut	60	6.8
88	550-533	Bent Tube Adapter	60	6.8

1.2 BandMask® Torque Tables

1.2.1 KMB 18 Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
7	550-081	Regulator Mount Nut	75 Molykote® 111 Lubricate or Equivalent	8.5 Molykote® 111 Lubricate or Equivalent
11 <i>See note 2</i>	530-097	Screw, Band Adjustment, Bronze	26 <i>See note 2</i>	2.9 <i>See note 2</i>
15	530-060	Comfort Insert Screw	6	0.7
18	530-317	Nut, Air Train (Inner)	35	4
20	530-317	Nut, Air Train (Outer)	15	1.7
24	530-050	Screw, Side Block	20	2.3
25	530-062	Screw, Band Keeper	14	1.6
28	530-073	Screw, Band Keeper	12	1.3
33	530-052	Screw, Port Retainer Plug	20	2.3
34	530-073	Screw, Band Keeper	12	1.3
37	530-035	Screw, Port Retainer	12	1.3
39	550-062	Knob, Nose Block	<i>Tighten to bottom out</i>	
42	550-116	Nose Block Guide	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
43	530-045	Screw, Whisker Kidney Plate	12	1.3
61	530-035	Screw, Water Dump	6 RTV Sealant	0.7 RTV Sealant
63	555-154	Bent Tube Assembly, Side Block End	75	8.5

1.2.2 KMB 28 Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
7	550-081	Regulator Mount Nut	75 Molykote® 111 Lubricate or Equivalent	8.5 Molykote® 111 Lubricate or Equivalent
11 <i>See note 2</i>	530-097	Screw, Band Adjustment, Bronze	26 <i>See note 2</i>	2.9 <i>See note 2</i>
18	530-317	Nut, Air Train (Outer)	15	1.7
20	530-317	Nut, Air Train (Inner)	35	4
22	530-050	Screw, Side Block	20	2.3
23	530-062	Screw, Band Keeper	14	1.6
26	530-073	Screw, Band Keeper	12	1.3

1.2.2 KMB 28 Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
31	530-052	Screw, Port Retainer Plug	20	2.3
32	530-073	Screw,Band Keeper	12	1.3
35	530-035	Screw, Port Retainer	12	1.3
37	550-062	Knob, Nose Block	<i>Tighten to bottom out</i>	
40	550-116	Nose Block Guide	15 Medium Strength Thread Locker	1.7 Medium Strength Thread Locker
41	530-045	Screw, Whisker Kidney Plate	12	1.3
59	555-154	Bent Tube Assembly, Side Block End	75	8.5

1.3 Surface Supplied MOD-1 Torque Tables**1.3.1 Surface Supplied MOD-1**

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
11	230-017	Adjustment Knob Screw	Tighten until the screw head is just below knob surface	
13	830-076	Screw	25	2.8
15	530-070	Screw	25	2.8
20	530-070	Screw	25	2.8

1.3.2 Surface Supplied Pod

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
9	805-250	Main Tube Hex	12	1.3
17	830-046	Screw	20	2.3
18	830-078	Screw	25	2.8
21	850-129	Banjo Tube	28	3.2
25	850-124	Cap	30	3.4
26	830-073	Mount Screw Long	15	1.7
28	830-041	Mount Screw	15	1.7

1.3.3 Regulator Pod Sub-Assembly

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
4	850-132	Port Plug	15	1.7
13	830-014	Screw	8	0.9

1.3.4 Side Block Sub-Assembly w/Emergency Valve

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
3	850-126	Hose Adapter	70	7.9
6	850-126	Hose Adapter	70	7.9
22	550-095	Plug w/ O-ring	20	2.3

1.3.5 Main Tube Assembly/Surf-Sup

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
20	220-021	End Cap Packing Nut	8	0.9

1.4 Side Block Torque Tables**1.4.1 Side Block Torque Table (Stainless Steel)**

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
1	555-117	Adapter, Brass (Umbilical)	See Note 1	See Note 1
2	555-195	One Way Valve Seat	150	17
8	555-195	One Way Valve Body	150	17
11	850-126	Hose Adapter	70	7.9
15	350-060	Low Pressure Plug, Large	20	2.3
18	550-178	Stud	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
24	550-568	Bonnet, Steady Flow Valve	100	11.3
29	550-564	Side Block Bent Tube Adapter	100 Medium Strength Thread Locker	11.3 Medium Strength Thread Locker
31	550-095	L.P. Plug, w/O-ring	20	2.3
38	550-551	Bonnet, EGS Valve	100	11.3

1.4.2 Brass Side Block Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
1	555-117	Adapter, Brass	See Note 1	See Note 1
2	555-195	Seat, One Way Valve	150	17
8	555-195	Body, One Way Valve	150	17
12	550-024	Stud, Side Block	20 Medium Strength Thread Locker	2.3 Medium Strength Thread Locker
18	550-020	Bonnet, Steady Flow Valve	100	11.3
23	550-095	L.P. Plug, w/O-ring	20	2.3
25	550-140	Emergency Valve Body	See Note 1	See Note 1
29	550-091	Packing Nut	45 after seating	5.1 after seating

1.5 Regulator Torque Tables

1.5.1 SuperFlow® Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
1	550-050	Jam Nut, Regulator	40	4.5
2	550-048	Inlet Nipple, Regulator	40	4.5
3	550-046	Inlet Nipple, Regulator	40	4.5
17	550-055	Packing Nut, Regulator	40 after seating	4.5 after seating
27	530-030	Screw, Regulator Clamp	12	1.3

1.5.2 SuperFlow® 350 Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
1	550-050	Jam Nut	40	4.5
2	550-048	Inlet Nipple	40	4.5
13	550-055	Packing Nut	40 after seating	4.5 after seating
23	530-030	Screw, Regulator Clamp	12	1.3

1.5.2 SuperFlow® 350 Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
32	530-020	Screw, Exhaust Flange	10 Medium Strength Thread Locker	1.1 Medium Strength Thread Locker

1.5.3 SuperFlow® 450 Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
1	550-050	Jam Nut, Regulator	40	4.5
2	550-533	Bent Tube Adapter, 450 Regulator	30	3.4
18	550-526	Packing Nut, 450 Regulator	30	3.4
30	530-052	Screw, 450 Regulator Cover	12	1.3

1.5.4 REX® Regulator Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
8	350-025	Packing Nut, Regulator Knob	40	4.5
34	550-560	Adjustment Lock Nut, REX	40	4.5

1.5.5 455 Balanced Regulator Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
17	550-567	Adjustment Packing Nut	60	6.8
31	530-099	Cover Retainer Screw	18	2
35	550-533	Bent Tube Adapter	60	6.8
36	550-050	Jam Nut	40	4.5

1.6 Communications Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
15	530-308	Nut, Communications Posts	<i>Snug—DO NOT overtighten RTV Sealant</i>	
21	550-040	Mount Nut, Communications Gland	20	2.3
28	555-178	Packing Nut, Waterproof Connector	20	2.3

1.7 Neck Ring Torque Tables

1.7.1 Neoprene Neck Ring Assembly Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
5	530-024*	Screw, Split Ring	14	1.6
6	530-022	Screw, Split Ring	14 Medium Strength Thread Locker	1.6 Medium Strength Thread Locker
7	530-220	Screw, Pull Strap	14	1.6

1.7.2 Latex Neck Ring Assembly Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
6	530-018	Screw	24 Medium Strength Thread Locker	2.7 Medium Strength Thread Locker
7	530-024*	Screw	14	1.6
8	530-022	Screw	14 Medium Strength Thread Locker	1.6 Medium Strength Thread Locker
9	530-220	Screw, Pull Strap Plate	14 Medium Strength Thread Locker	1.6 Medium Strength Thread Locker

1.7.3 SL 17B Neck Clamp Yoke Assembly

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
5	530-320	Nut, Lock	50 <i>Maximum</i>	5.7 <i>Maximum</i>
7	530-066	Screw	20	2.3
19	530-080	Screw, Yoke	20	2.3
23	530-025	Screw, Rear Hinge Tab	25	2.8

1.8 Locking Collar Torque Table

1.8.1 Locking Collar Torque Table (Stainless Steel)

Loc. #	Part #	Description	Torque
5	530-064	Screw, Neck Pad	<i>Snug—to no movement of pad</i>

1.9 Manifold Block Torque Table

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
4	550-091	Packing Nut	45 after seating	5.1 after seating
8	550-140	Emergency Valve Body	See Note 1	See Note 1
11	550-095	Plug, L.P	20	2.3
13	555-195	Body, One Way Valve	150	17
19	555-195	Body, One Way Valve	150	17
21	555-117	Adapter	See Note 1	See Note 1
22	355-225	Adapter	See Note 1	See Note 1
23	355-205	Adapter	See Note 1	See Note 1
24	530-070	Screw	35	4
29	350-060	Plug, Large	20	2.3
30	550-095	Plug, L.P	20	2.3

1.10 Miscellaneous Torque Specifications

Loc. #	Part #	Description	Torque in Inch Pounds	Torque in Newton Meters
—	200-017	Overpressure Relief Valve	20	2.3
—	530-210	Weld Lens Mount Bolt	23	2.6
—	555-210	Restrictor Adaptor	20	2.3

1.11 Notes on Torque Specifications



NOTE

NOTE 1: Use Teflon® tape for two to two and a half wraps, starting two threads back from the pipe thread end of the fitting to avoid getting Teflon® tape in the valve. Tighten pipe thread using standard pipe threading procedures.



NOTE

NOTE 2: Maximum torque, bands should have no less than an 1/8 inch even gap between the bands. On installation, a marine grade anti-seize may be used on this screw.



NOTE

NOTE 3: Kirby Morgan recommends that torque tools be calibrated annually. (Allowable deviation: ±8%).

*The screws may need adjustment after several dives.

1.12 Checklist, Maintenance, and Pre-Dive Inspections

For the most current check lists, helmet and BandMask® maintenance procedures, and pre-dive inspections, please check on the internet at www.divelab.com.