



Kirby Morgan Dive Systems, Inc.®


1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.KirbyMorgan.com email: kmdsi@KirbyMorgan.com

Part #825-030 Swichover Regulator Kit

PART #	DESCRIPTION	QTY
305-017	Air Inlet Swivel, Hi-Flow	1
330-105	Nut	2
805-050	Regulator Assembly	1
830-035	Shoulder Screw	2

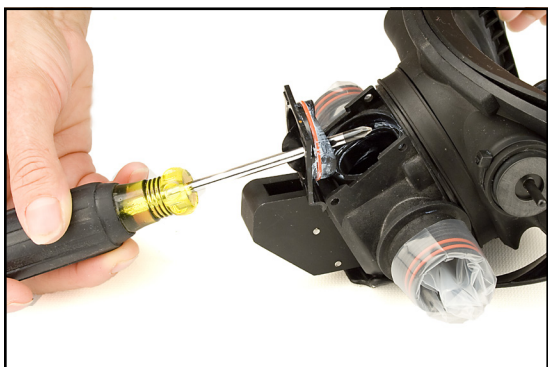

1. Remove the Auto Water Purge Valve Assembly (P/N 805-055) by using a screw driver or similar device.



2. Apply Christo-Lube® MCG III to the threading on the T-Bit, Main Body (P/N 820-070) and on the Regulator Assembly.



Kirby Morgan Dive Systems, Inc.®


1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.KirbyMorgan.com email: kmdsi@KirbyMorgan.com



3. Interlock the T-Bit (P/N 820-070) and Regulator Assembly NATO (P/N 805-050).

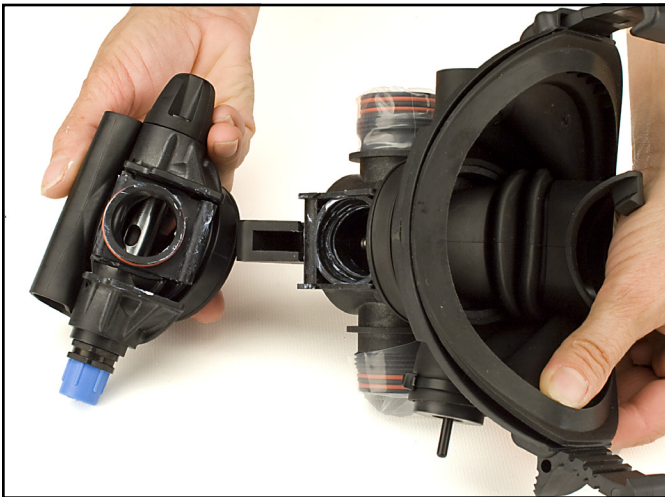

4. Push shoulder screws (P/N 830-035) through left brace, T-Bit Main Body, and right brace.



5. Secure nuts on shoulder screws by using the socket wrench (P/N 525-612) in Regulator Tool Kit (P/N 525-620) or needle nose pliers.

⚠ CAUTION

Use only KMDSI original replacement parts. Using other manufacturers' parts will interfere with the performance of your life support equipment and may jeopardize your safety. Additionally, any substitutions will void any warranties offered by KMDSI. When ordering spares, always insist on Kirby Morgan Genuine Parts.

