Kirby Morgan Dive Systems, Inc.®


1430 Jason Way Santa Maria, California 93455
Phone: 805/928-7772 Fax: 805/928-0342
www.KirbyMorgan.com email: kmdsi@KirbyMorgan.com

Part #525-712
Stainless Steel Helmet Mount Block Kit

PART #	DESCRIPTION	QTY
520-030	Teflon® Washer	1
530-320	Lock Nut *(pre-installed)*	2
530-535	Washer	2
530-917	Bolt	2
550-575	Mounting Block	1

Tools Required:

- 7⁄16" Box or Open Ended Wrench

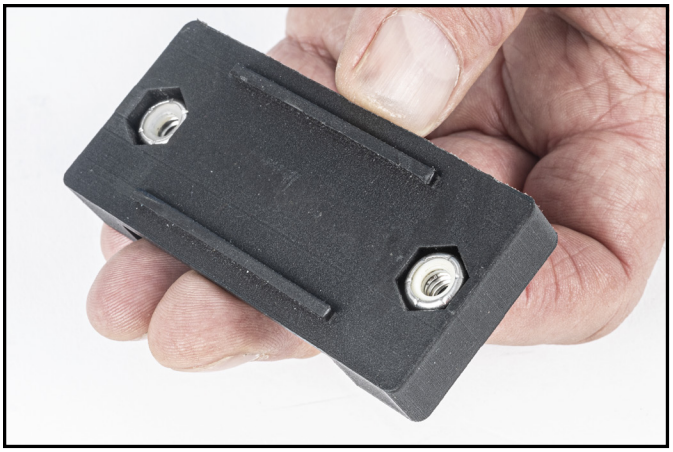


NOTE

To install or remove the mount block, the bracket should be removed from the helmet.

1. Examine the mount block and confirm that the pre-installed lock nuts are fully seated into the block.

2. Insert the stainless steel washers onto both bolts, and insert one Teflon® washer onto one of the bolts. Set aside.

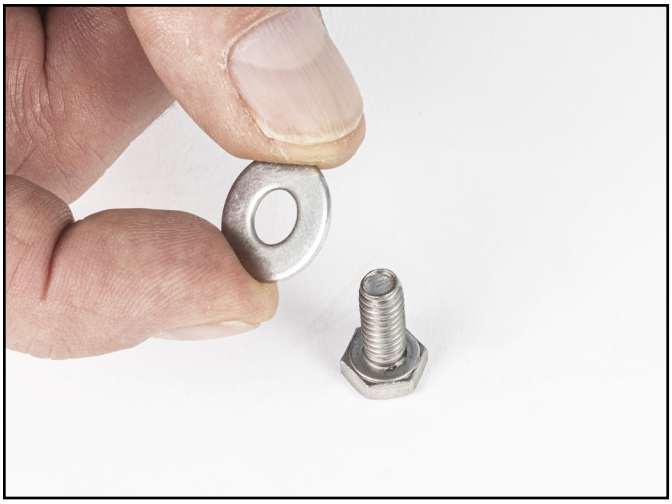





© MMXXVI Kirby Morgan Dive Systems, Inc. All Rights Reserved

Kirby Morgan Dive Systems, Inc.®


1430 Jason Way Santa Maria, California 93455
Phone: 805/928-7772 Fax: 805/928-0342
www.KirbyMorgan.com email: kmdsi@KirbyMorgan.com


3. Position the bracket so the underside faces up. Place the mount block, lock nut facing down, on the top-side of the bracket and align a receiving hole with the desired arc.

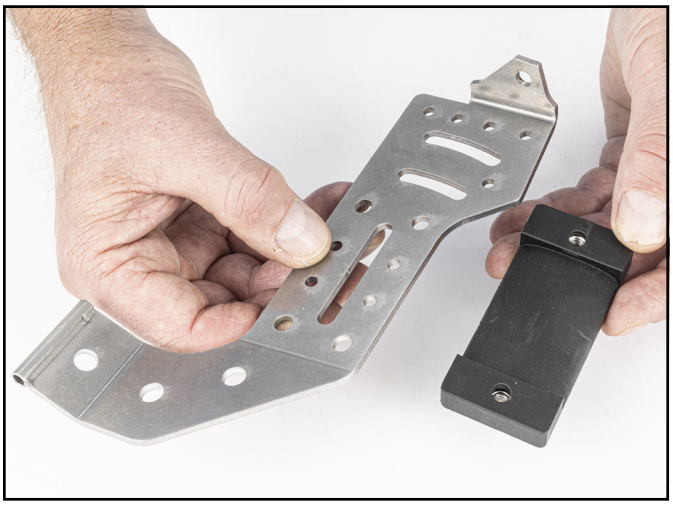


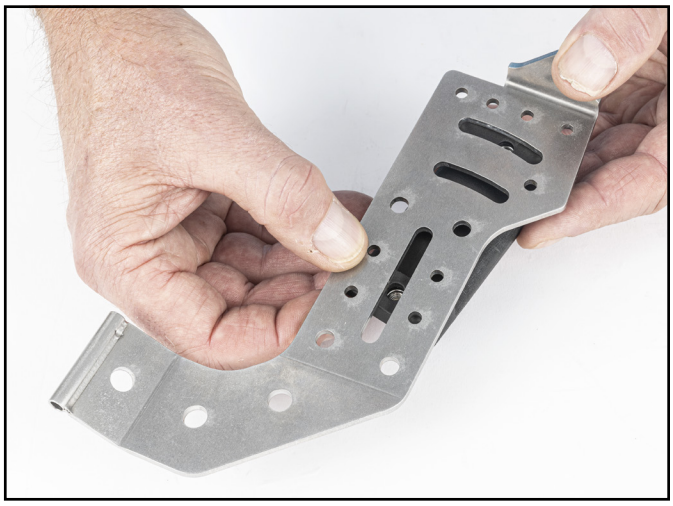

4. Thread the bolt with a Teflon® washer into the desired arc of the mount block's receiving hole. Thread the remaining bolt with a stainless steel washer into the running slot on the bracket. Hand-tighten both only.

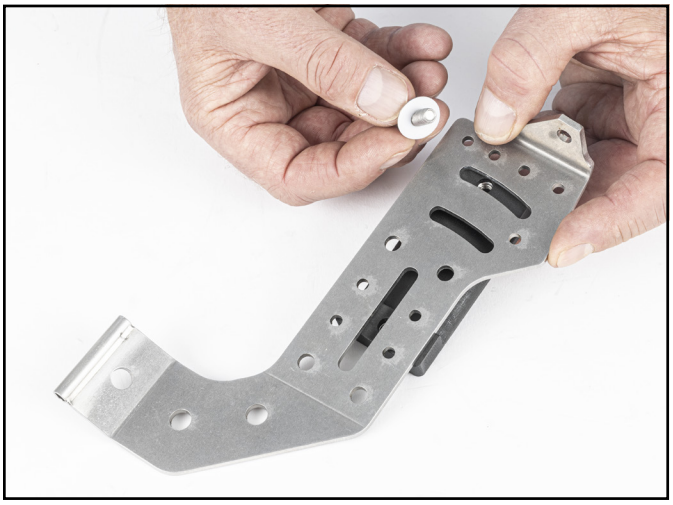

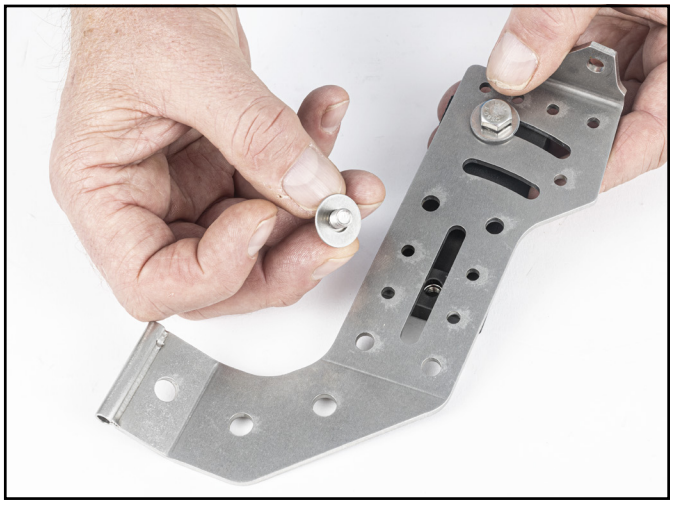

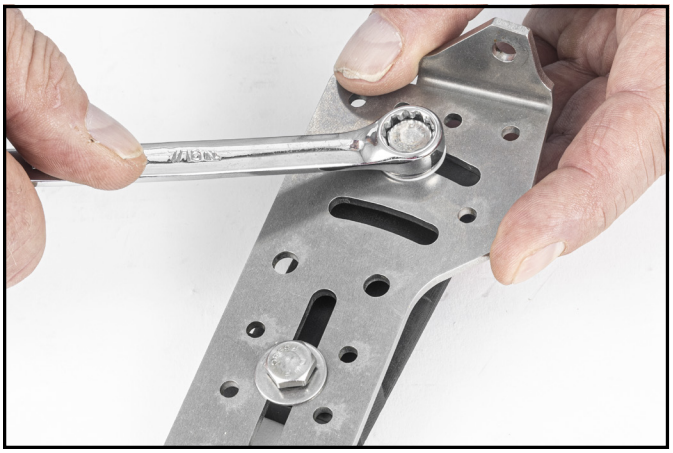

5. Using the 7⁄16" box or open ended wrench, tighten the bolts into the locknut to the desired resistance. **DO NOT** overtighten.

© MMXXVI Kirby Morgan Dive Systems, Inc. All Rights Reserved