



Kirby Morgan Dive Systems, Inc.®

1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.KirbyMorgan.com email: kmdsi@KirbyMorgan.com

525-770 Pull Strap Assembly Kit

Parts Needed:

| Part # | Description | Qty. |
|---------|---------------------|------|
| 505-142 | Pull Strap Assembly | 1 |
| 530-220 | Screw | 2 |

Instructions:

1. Remove Screws; P/N 530-220 as shown in Figure 1.
2. Remove Strap Plate; P/N 540-115.
3. Contingent upon which Pull Strap is installed on your Neck Dam remove either Pull Strap; P/N 530-808 or Pull Strap Assembly; P/N 505-142.
4. Place on the new Pull Strap Assembly; P/N 505-142.
5. Place on Strap Plate; P/N 540-115.
6. Place on the new Screws; P/N 530-220.

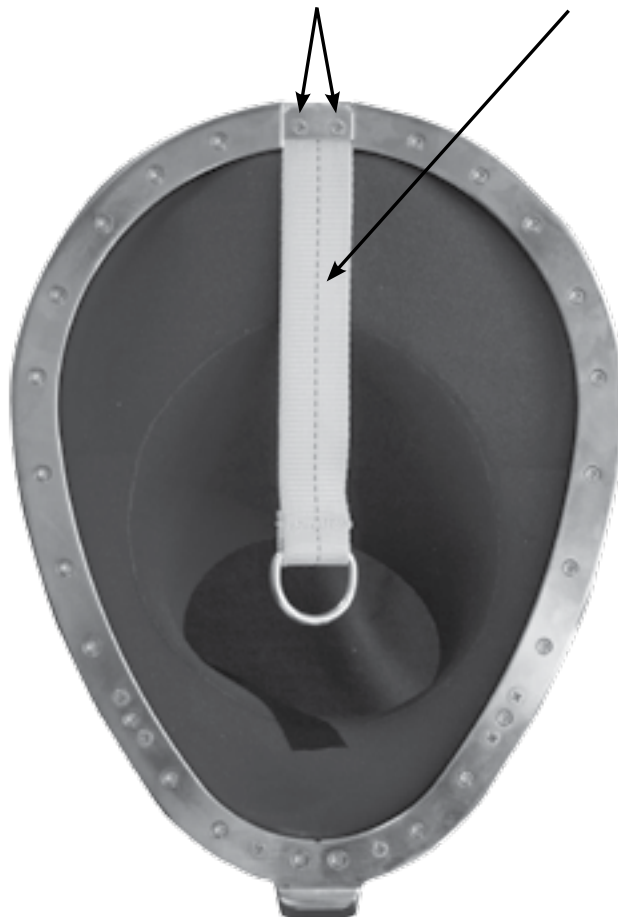


Figure 1