



# Kirby Morgan Dive Systems, Inc.®

1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.KirbyMorgan.com email: kmdsi@KirbyMorgan.com


## Part #525-775 Oral Nasal With Lens Retainer Kit



Part Number	Description	Qty
510-724	Low Volume Oral Nasal Mask	1
510-747	Oral Nasal Mask	1
520-538	Lens Retainer Frame	1
530-923	Wire Mount	1

1. Take the lens retainer frame to your local optometrist and have them make and install your rx prescription lenses into the frame.

### Optometrist notes

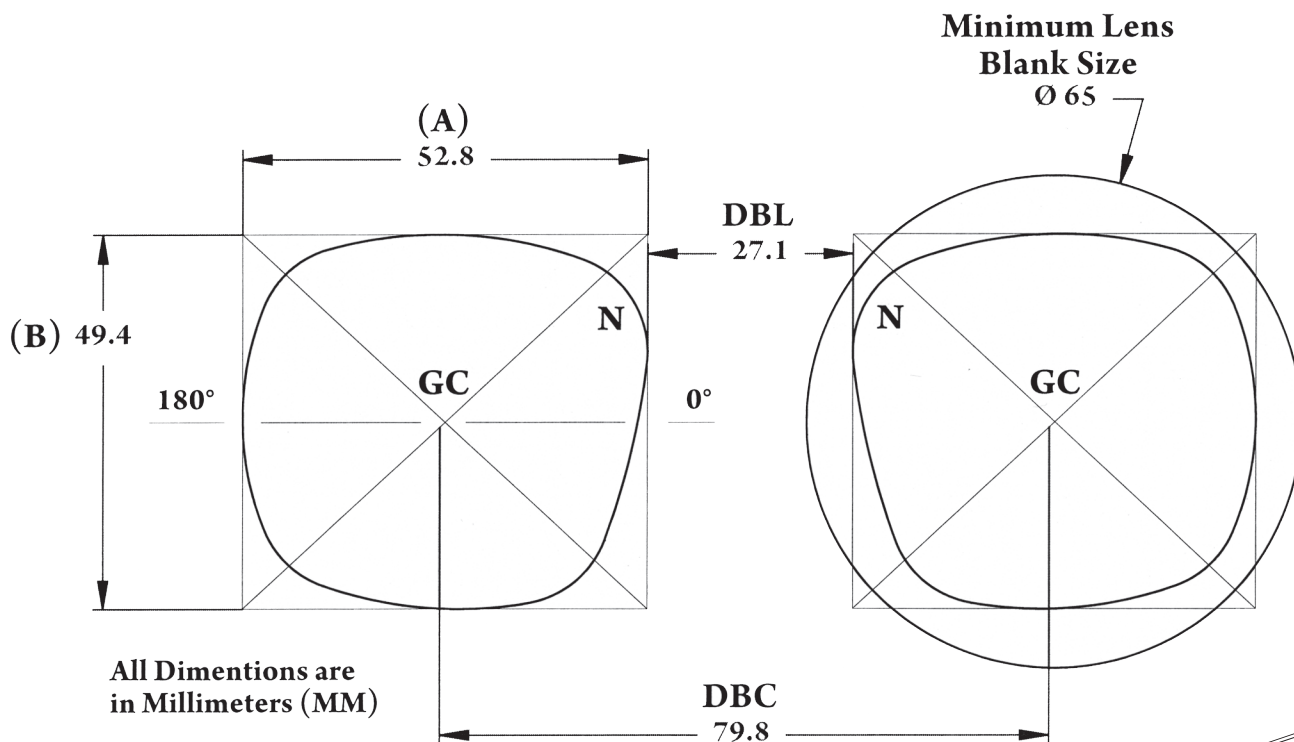

# Kirby Morgan Dive Systems, Inc.®

1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.KirbyMorgan.com email: kmddsi@KirbyMorgan.com



2. Once the lenses have been installed, attach the mount wire, p/n 530-923 onto the retainer frame, p/n 520-538 by inserting it into the slot on the front of the frames. Push against a firm surface until you feel a “click.”



**NOTE**

Make sure that the “legs” are oriented facing downward.



3. Next mount the lens retainer onto the oral nasal by insert the “legs” of the mount wire into the receiving holes located on top of the nose area of the oral nasal



**NOTE**

Some slight adjustments can be made to the positioning of the frames if needed.





# Kirby Morgan Dive Systems, Inc.®

1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.KirbyMorgan.com email: kmdsi@KirbyMorgan.com

Use a screwdriver to raise the frames, or pliers to lower them.

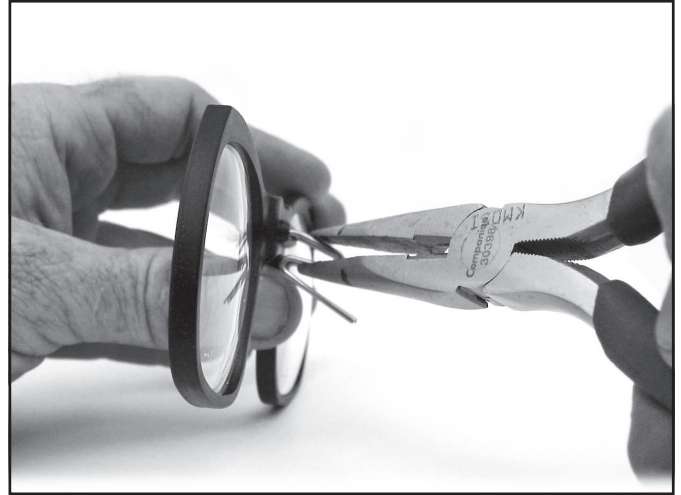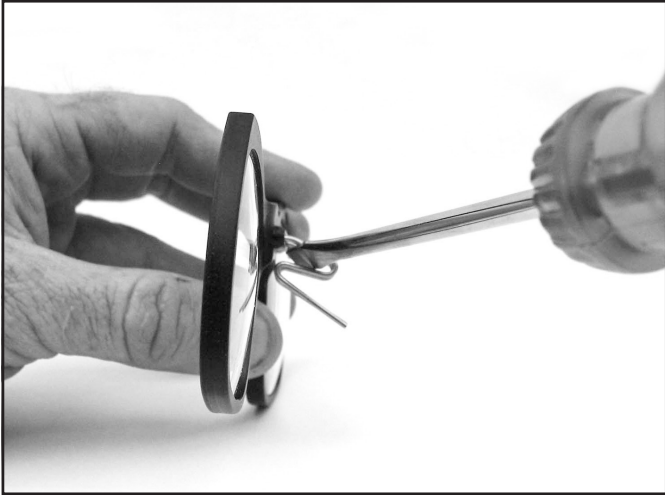

4. Reinstall the oral nasal mask into the helmet or mask. See "1.1.3 Oral Nasal Mask Replacement" on page ON-2 in the modular manual.

