



Kirby Morgan Dive Systems, Inc.®

1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.KirbyMorgan.com email: kmddsi@KirbyMorgan.com

Part #525-363 37/17K/17C Soft Goods Overhaul Kit

Part #	Description	Qty	Part #	Description	Qty
510-007	O-Ring	2	520-031	Washer	1
510-029	O-Ring	1	520-032	Washer	1
510-033	O-Ring	1	520-042	11" Tie-Wrap/D.E. Whisker	4
510-490	O-Ring	1	525-032	Whisker Clamp Kit	1
510-550	Valve, Oral Nasal	1	525-305	O-Ring Kit, SL 17C	1
510-552	Exhaust Valve	1	525-330	One-Way Valve Kit	1
510-553	Diaphragm	1	530-028	Nut	1
510-561	Valve, Main Exhaust	1	530-303	Lock Nut	1
510-580	Seat, Inlet Valve	1	530-601	Retaining Pin	1
510-776	Exhaust Valve	2	540-095	Packing Washer	1
520-030	Washer	1	520-167	Washer, Teflon	1

O-Ring Identification on Reverse Side

O-rings should be lightly lubricated with food grade silicone Dow Corning 111 or equivalent in accordance with the operations and maintenance manual. Christo-Lube® may also be used. At a minimum, all helmet or BandMask O-rings should be replaced at least once a year in accordance with the A2.1 for the helmet or mask being inspected. During daily and monthly maintenance, disturbed O-rings and valves may be reused providing no damage or deformation is found. O-rings and valves may require replacement more often than yearly if the helmet or mask use is extreme, or if the helmet or mask is used in waters containing oil or chemical contamination. Daily cleaning and inspections as well as performing the monthly inspection A2.2 will identify the need more accurately than simply placing a number of hours between overhaul. Store spare O-rings, valves and soft goods in a cool, dark, dry place. Avoid prolonged exposure to temperatures above 90 degrees Fahrenheit and/or exposure to ultra violet rays. Do not lubricate exhaust valves. Lubricating valves can cause dirt to stick, allowing leakage.

⚠ CAUTION

Use only KMDSI original replacement parts. The use of other manufacturer's parts will interfere with the performance characteristics of your life support equipment and may jeopardize your safety. Additionally, any substitutions will void any warranties offered by KMDSI. When ordering spares, always insist on Kirby Morgan Genuine Parts.

Kirby Morgan Dive Systems, Inc.®



1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.KirbyMorgan.com email: kmdsi@KirbyMorgan.com



O-Ring Identification

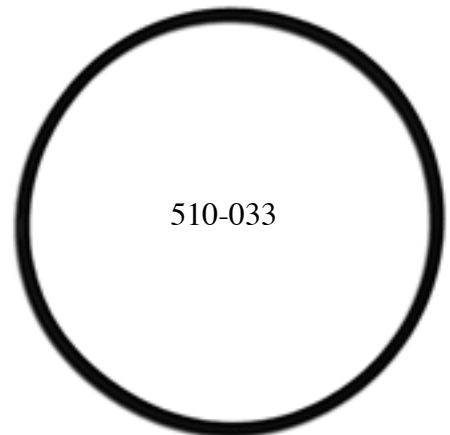

510-450 9.0" x .278"
Neck Ring O-Ring
no diagram

510-260 6.5" x .153"
Face Port O-Ring
no diagram

