



Kirby Morgan Dive Systems, Inc.®

1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772

Fax: 805/928-0342

www.KirbyMorgan.com email: kmgsi@KirbyMorgan.com

Part #525-360 SL 17 A/B Soft Goods Overhaul Kit

| PART # | DESCRIPTION | QTY | PART # | DESCRIPTION | QTY |
|---------|----------------------|-----|---------|--------------------------------|-----|
| 310-003 | O-ring | 1 | 510-561 | Valve, Water Dump, Black | 1 |
| 510-007 | O-ring | 4 | 510-580 | Seat, Inlet Valve | 1 |
| 510-008 | O-ring | 2 | 510-776 | Exhaust Valve | 2 |
| 510-010 | O-ring | 3 | 520-024 | Packing | 1 |
| 510-011 | O-ring | 2 | 520-030 | Washer | 1 |
| 510-012 | O-ring | 1 | 520-031 | Washer | 1 |
| 510-014 | O-ring | 1 | 520-032 | Washer | 1 |
| 510-015 | O-ring | 1 | 520-033 | O-ring, Teflon® | 1 |
| 510-033 | O-ring | 2 | 520-042 | 11" Tie-Wrap | 4 |
| 510-211 | O-ring | 1 | 525-032 | Kit, Whisker Clamp Replacement | 1 |
| 510-260 | O-ring, View Port | 1 | 525-330 | Kit, One-Way Valve | 1 |
| 510-446 | O-ring, 17A/B Bottom | 1 | 530-028 | Nut | 1 |
| 510-481 | O-ring | 1 | 530-303 | Lock Nut | 1 |
| 510-483 | O-ring | 1 | 530-320 | Lock Nut | 1 |
| 510-550 | Valve, Oral Nasal | 1 | 530-601 | Retaining Pin | 2 |
| 510-552 | Exhaust Valve | 1 | 540-095 | Packing Washer | 1 |
| 510-553 | Diaphragm | 1 | | | |

***See next page for O-ring Identification**

O-rings should be lightly lubricated with food grade silicone Dow Corning® 111 or equivalent in accordance with the operations and maintenance manual. Christo-Lube® may also be used. At a minimum, all helmet or BandMask® O-rings should be replaced at least once a year in accordance with the A2.1 checklist for the helmet or mask being inspected. During daily and monthly maintenance, O-rings and valves may be reused providing no damage or deformation is found. O-rings and valves may require replacement more often than yearly if the helmet or mask use is extreme, or if the helmet or mask is used in waters containing oil or chemical contamination. Daily cleaning and inspections as well as performing the monthly inspection (A2.2 checklist) will identify the need more accurately than simply placing a number of hours between overhaul. Store spare O-rings, valves and soft goods in a cool, dark, dry place. Avoid prolonged exposure to temperatures above 90 degrees Fahrenheit and/or exposure to ultra violet rays. Do not lubricate exhaust valves. Lubricating valves can cause dirt to stick, allowing leakage.



Kirby Morgan Dive Systems, Inc.®

1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.KirbyMorgan.com email: kmdsi@KirbyMorgan.com



310-003

1. Low Pressure Side Block Port Plug (Bottom) (Qty. 1)



510-007

1. Water Dump Adapter Cover (Qty. 2)



510-008

1. Nose Block Shaft (Qty. 2)



510-010

1. Nose Block Guide Seal (Qty. 1)
2. Steady Flow (Qty. 1)



510-011

1. Regulator Adjustment Knob (Qty. 1)



510-012

1. Bent Tube (Qty. 1)




510-014

1. Inlet Nipple (Qty. 1)



510-015

1. Bonnet Nut for Steady Flow (Qty. 1)

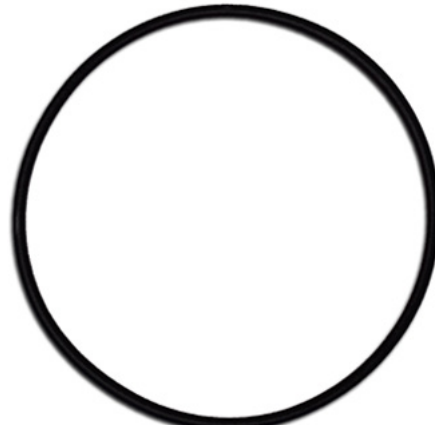

510-033

1. Quad Exhaust Cover (Qty. 1)



510-483

1. One Way Valve Mounting O-ring (Qty. 1)



520-033

1. Bent Tube (Qty. 1)



510-211

1. Regulator Mount Nut (Qty. 1)



510-481

1. Comm Port Plug (Qty. 1)
2. Comm Packing Gland (Qty. 1)

NOT SHOWN

510-260 6.5" × 0.153"
1. Face Port O-ring

510-450 9" × 0.278"
1. Neck Ring O-ring

⚠ CAUTION

Use only KMDSI original replacement parts. The use of other manufacturers' parts will interfere with the performance characteristics of your life support equipment and may jeopardize your safety. Additionally, any substitutions will void any warranties offered by KMDSI. When ordering spares, always insist on Kirby Morgan Genuine Parts.

