



# Kirby Morgan Dive Systems, Inc.®

1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.KirbyMorgan.com email: kmdsi@KirbyMorgan.com

## Part #525-333

# Helmet Spares Kit for SuperLite® 27® Helmets

Part #	Description	Qty	Part #	Description	Qty
330-030	Screw	1	510-690	Oral Nasal Mask	1
330-035	Washer	1	510-754	Head Cushion Assembly	1
510-008	O-ring*	2	515-033	Communications Set	1
510-010	O-ring*	1	520-042	Tie Wrap	1
510-029	O-ring*	1	525-309	Regulator Rebuild Kit	1
510-260	O-ring*	1	525-311	Side Block Rebuild Kit	1
510-450	O-ring*	1	525-745	Head Cushion Foam Spacer Kit	1
510-490	O-ring*	1	525-755	SL-27 Tri-Valve Exhaust Kit	1
510-504	Neck Dam, Neoprene, Medium	1	530-035	Screw	2
510-550	Oral Nasal Valve	1	530-045	Screw	1
510-575	Nose Block Pad	1	550-061	Spacer	2
510-625	Water Dump Shroud	1	550-122	Spring Spacer	1
510-683	Chin Cushion	1			

\*See back page for *O-ring Identification*

O-rings should be lightly lubricated with food grade silicone Dow Corning® 111 or equivalent in accordance with the operations and maintenance manual. Christo-Lube® may also be used. At a minimum, all helmet or BandMask® O-rings should be replaced at least once a year in accordance with the A2.1 checklist for the helmet or mask being inspected. During daily and monthly maintenance, disturbed O-rings and valves may be reused providing no damage or deformation is found. O-rings and valves may require replacement more often than yearly if the helmet or mask use is extreme, or if the helmet or mask is used in waters containing oil or chemical contamination. Daily cleaning and inspections as well as performing the monthly inspection (A2.2 checklist) will identify the need more accurately than simply placing a number of hours between overhaul. Store spare O-rings, valves and soft goods in a cool, dark, dry place. Avoid prolonged exposure to temperatures above 90 degrees Fahrenheit and/or exposure to ultra violet rays. Do not lubricate exhaust valves. Lubricating valves can cause dirt to stick, allowing leakage.

### **⚠ CAUTION**

**Use only KMDSI original replacement parts. The use of other manufacturers' parts will interfere with the performance characteristics of your life support equipment and may jeopardize your safety. Additionally, any substitutions will void any warranties offered by KMDSI. When ordering spares, always insist on Kirby Morgan Genuine Parts.**

# Kirby Morgan Dive Systems, Inc.®


1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.KirbyMorgan.com email: kmdsi@KirbyMorgan.com



## \*O-ring Descriptions

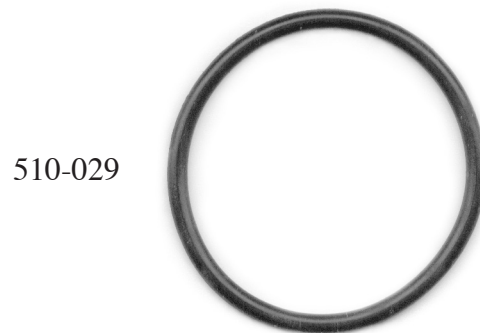

---

510-260 6.5" x .153"  
View Port O-ring  
(not shown)

---

510-450 9.0" x .278"  
Neck Ring  
(not shown)